

Important Notes

Blower fan specification

Motor Power: 1.5HP, 220-240V, 50HZ.

Phase: Single, R.P.M: 2387/ 2650/ 2868

Amps: 5A/ 6A/ 7A With Inflatable Fully Inflated

Pressure:1.9 Inch

Max Air Flow: 5000 CFM

Cable: 1.5m m² SJTW 105°C

Speed Control: 3 Speeds

Dimension:18"/ 45.5 cm

Installation

- * Find a clean, even ground to site the air dancer, keep away the unit from any trees or flammable and pointed objects.
- * The user must ensure that everything is included and intact for you to begin your advertising.
- * Unroll the skin of air dancer and fit onto the rim of heavy duty blower and secured with the strap, then safely connect the blower fan to a safe power source and turn on, then air dancer will fill up with air and blows up.
- * Check the blower is positioned correctly allowing for maximum airflow. The user must check regularly during operation to guard against any accidents or loss of pressure.

Weather Conditions

- * Do not use the unit in Wet Weather, Storms, High Winds, Snow and Ice and any other bad weather conditions that a competent person deems to be unsafe.
- * Keep away from fire or flame and from sources of sparks or ignition

Caution

- * Ensure the cable is trailed away safely and taped down, care for users walk away from any anchorage points or cables to avoid tripping.
- * Be ensure that do not let the unit or tube drag on the ground.
- *This is not a toy and is intended for using by adults. We cannot be held responsible for loss or injury when the product is not used correctly.

Pack Away

- *Switch off the electrical supply and disconnect the blower, make sure the air tube is completely dry and clean to avoid mildew from the air dancer before rolling up and packing away.
- * Keep the unit in a seal bag and in a dry and well-ventilated place.