



PRIME TECT[®]



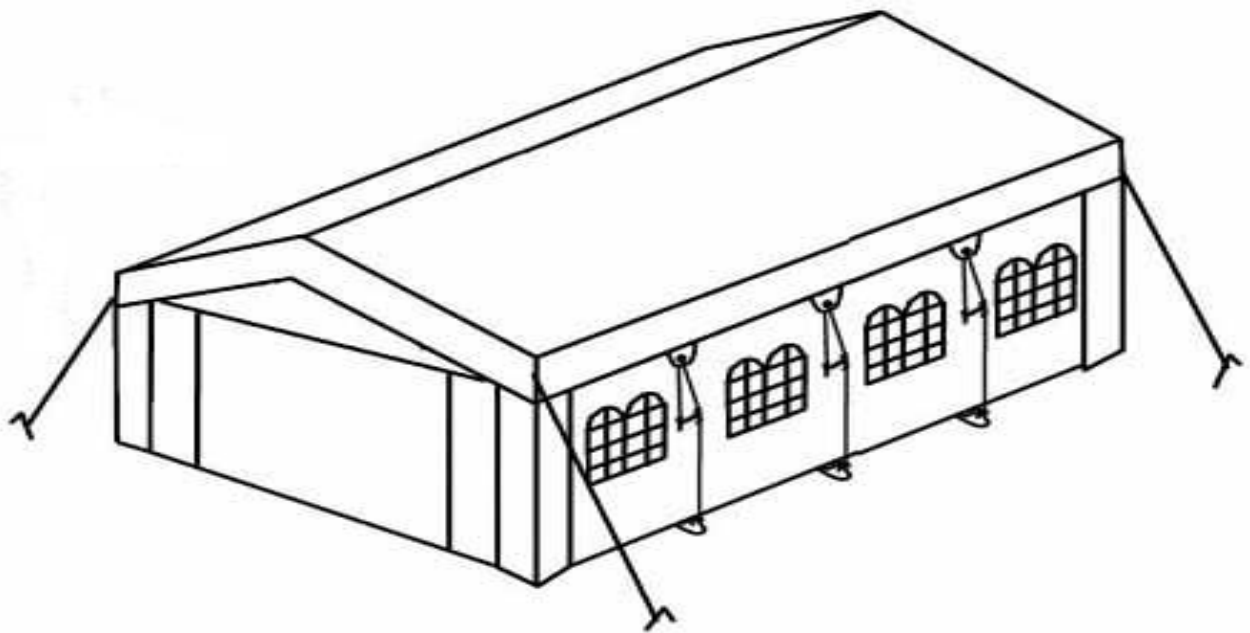





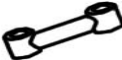


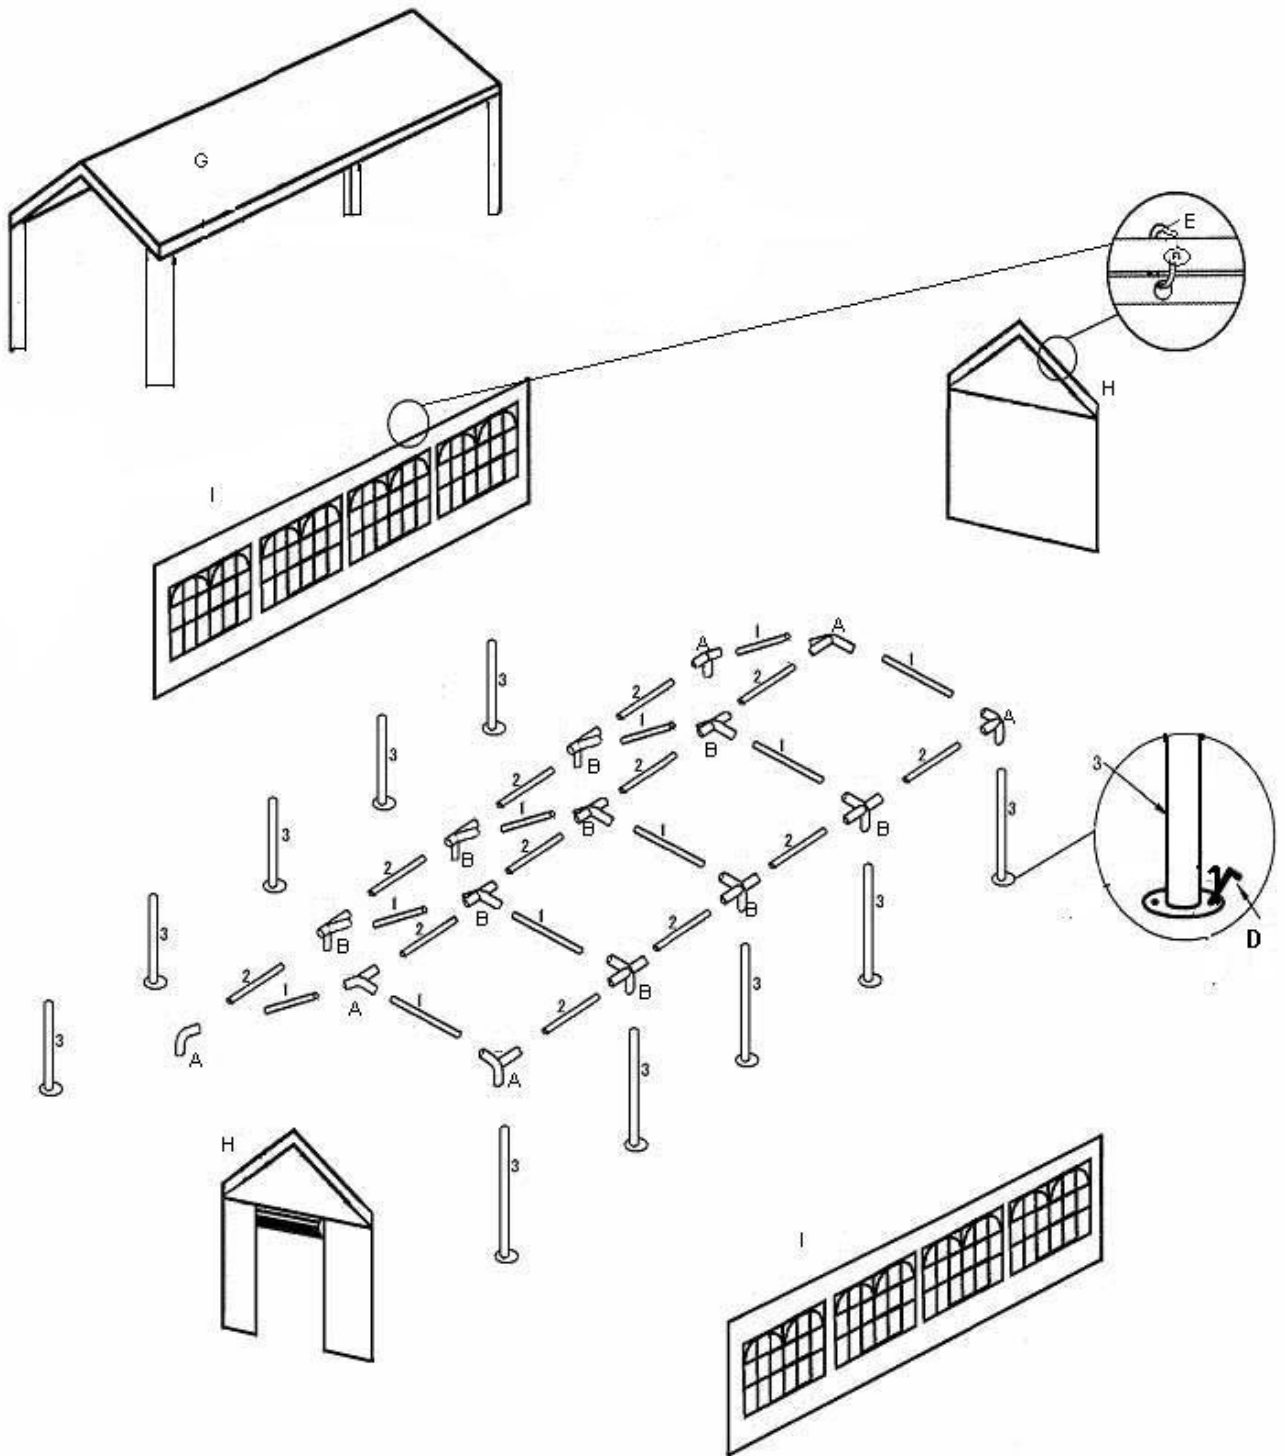



TENTS USA

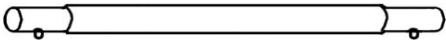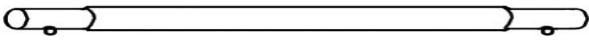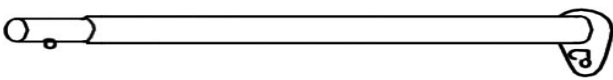CAE-100-05
Party Tent 3x9M





● Parts list

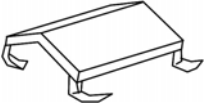
Parts no.		Description	Qty
1		Frame pole \varnothing 38mm	10
2		Frame pole \varnothing 38mm	12
3		Support pole \varnothing 38mm	10
A		3-way joint	6
B		4-way joint	9
C		Peg	12
D		Long peg	14
E		Bungee cord	84
F		Tension adjuster	18
1		Adjust ropes	8
2		Adjust ropes	4
3		Adjust ropes	6
4		Guy ropes	4
K		Roof	1
M		End panel	2
L		Wall panel	2

● **Assembly Instruction**

Step 1


Select a flat ground for the tent, unpack the carton and check all the parts including tubes, tent and accessories... etc. are present as same as list.

Assemble the framework of rooftop by joining the portion (A,B) together with poles (1,2). To ensure the snap button flipped on every pole insertion for properly fitting.

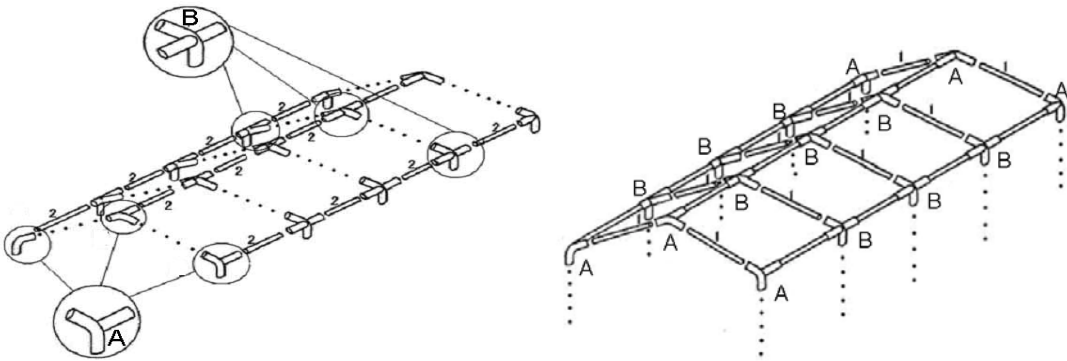



Step 2

Attach one end of supported pole (3) to the joints (A,B) .

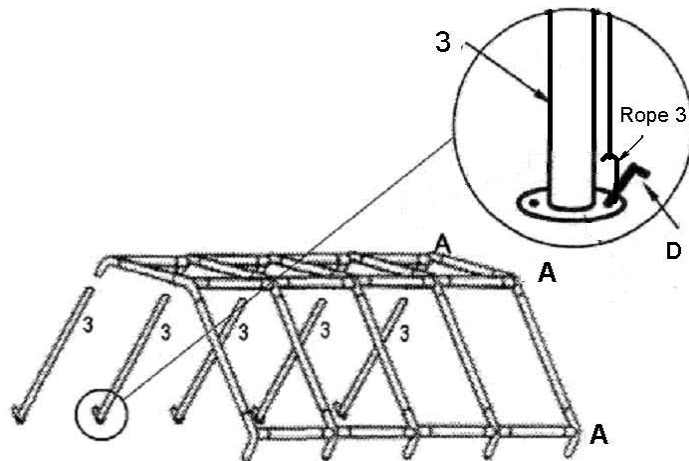


Step 3

Between the roof (K) and framework, inserting the 4 adjusting ropes (2) paralleled the ridge and 8 adjusting ropes (1) across ridge until ends through the grommets that are constructed roof border and then attach to tension adjusters (F).

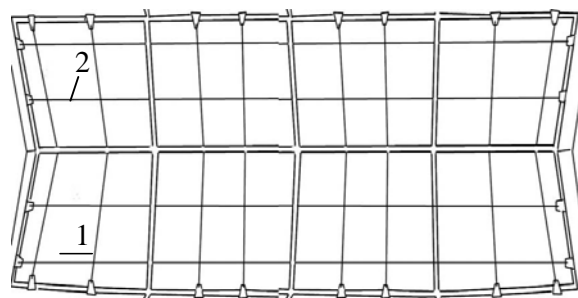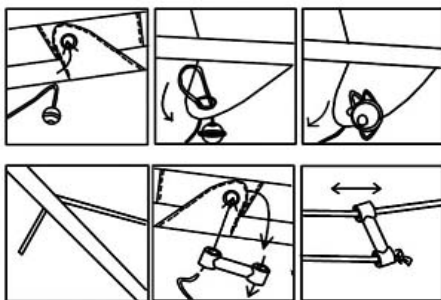

Step 4


Attach the another 4 supported poles (3) to the joints (A,B), built-up the framework, spread the wall panel (L) and door panel(M) attach to framework by using the bungee cords clasping the frame to grommets that is construct over the wall panel and door panel, then fixing each of support poles to ground with long peg (D) for ensure stability.

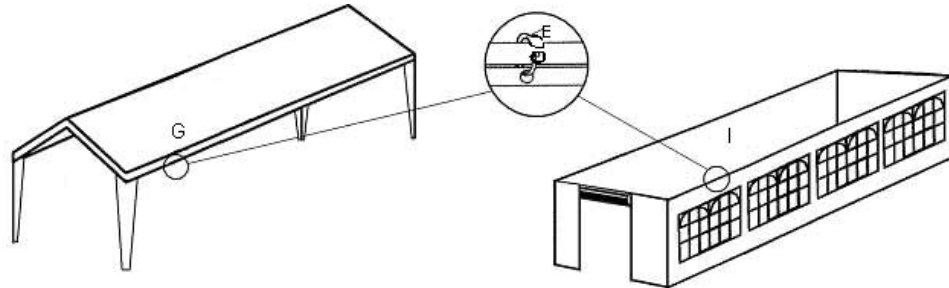

Step 5

The Guy lines (4) clasp to each corner of roof and another end of line fix to ground by pegs (D). Using adjust rope (3), one end attach to tension adjusters (F) and another end through the grommets that are constructed outside roof border and along in between two windows, then hook in the base of each support pole (3) as shown on figure.

To anchor the bottom of sidewall and door panels to ground with peg (C).

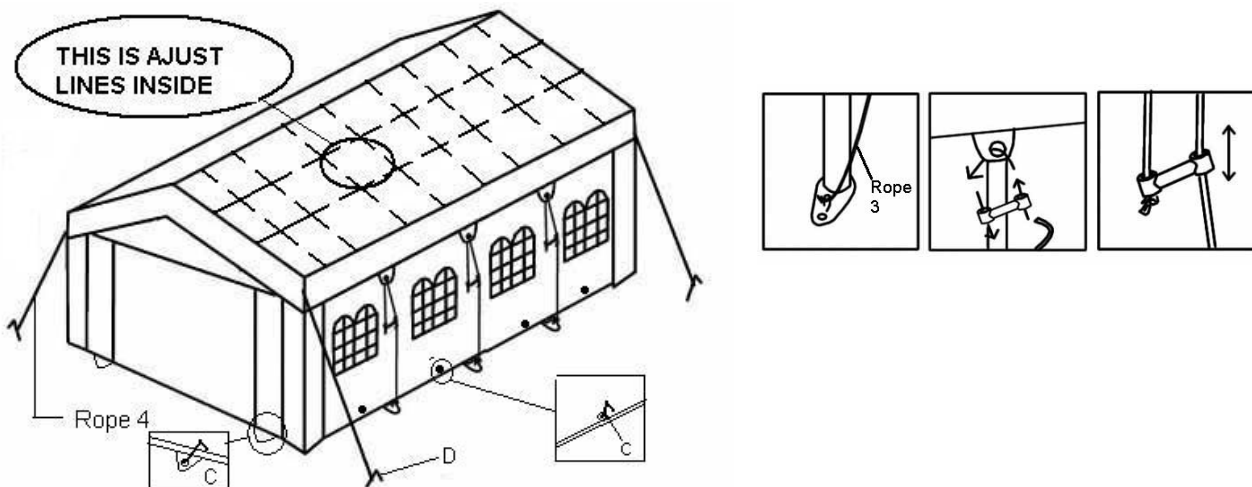

Warning

1. Take note that the tent needs to be handled carefully to avoid damage.
2. Do not force the frame as they may be damage in the process.
3. Tents are meant as temporary shelter and must be evacuated under extreme weather conditions.
4. Please select a suitable site for the tent to avoid the damage to underground sprinkler systems, water, gas or electrical lines.

PRIME TECH[®]
TENTS USA