


Attachable Battery for iPod / iPhone

User manual

Welcome

Thank you for purchasing the attachable battery. You will now be able to travel great distances; be the master of your own destiny, no longer bound by the limitations of your iPod/iPhone.

Instructions

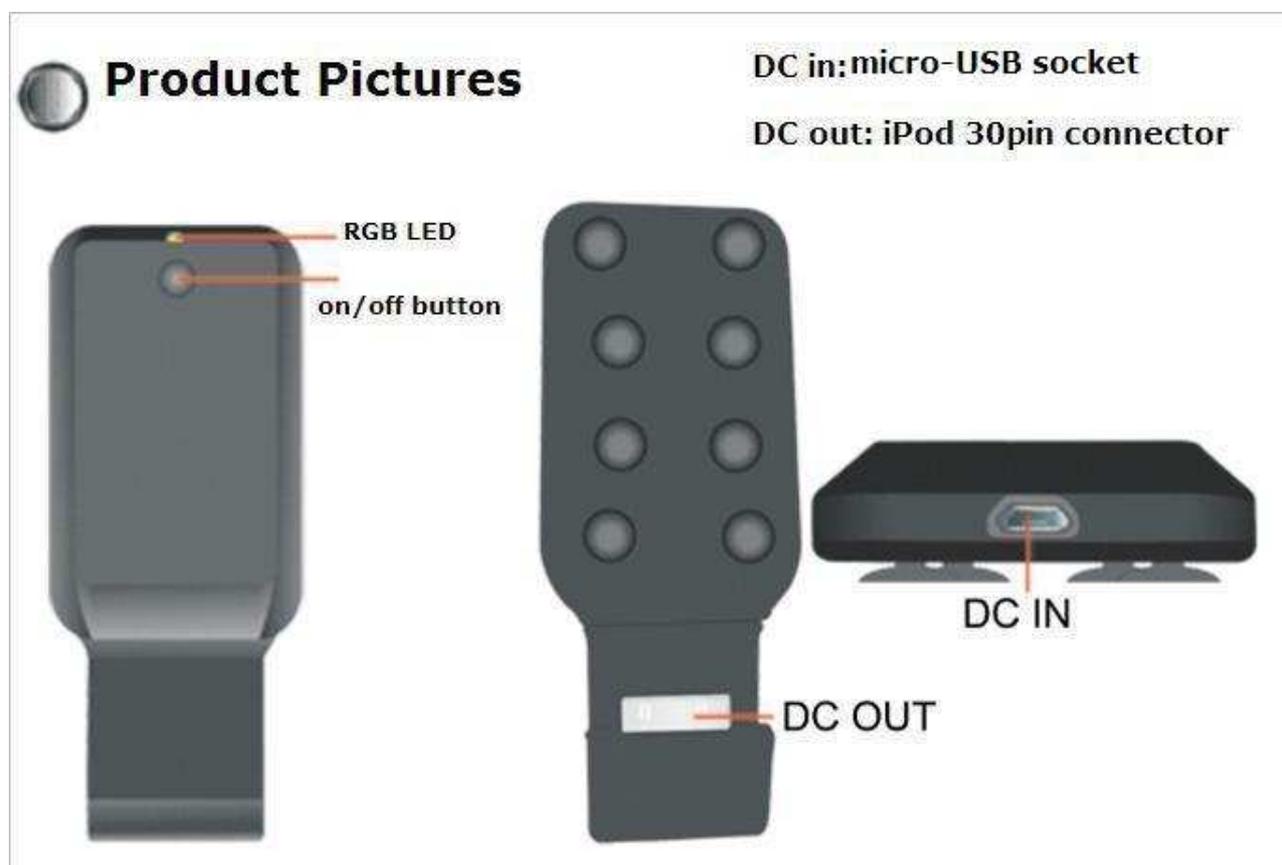

ON/OFF Button

When this attachable batter is not working (neither charging or discharging), quickly press the button will indicate the power status by LED.

When attaching the battery to an iPod/iPhone, hold the ON/OFF button once to beginning charging and again to stop charging. Quickly press the button for checking power status.

RGB LED

When charging this attachable battery, (USB charging this attachable battery)

red LED means less than 5% power

blue LED means 50%-99% power

green LED means full power.

When discharging this attachable batter, (this attachable battery charging iPod/iPhone)

green LED means 50%-100% power.

blue LED means 5%-50% power

red LED means less than 5% power

Sync

Just put iPod/iPhone into attachable battery, use the accessory USB-micro USB data cable to connect this attachable battery and PC, you can sync your iPod/iPhone to iTunes.

Compatibility

iPod series, iPhone, iPhone 3G, iPhone 3G s, iPhone 4

Maintenance

To keep your attachable battery operating to its fullest potential, make sure to do the following:

1. Re-charge your attachable battery once every three months when not in use.
2. Keep your attachable battery dry and away from moisture and corrosive materials.
3. Do not wash the attachable battery with harsh chemicals, soaps or detergents.

Warning

Read all instruction and warnings prior to using this product. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which damages you (purchaser), and not manufacturer are responsible.

- Do not store battery in high temperature environment, including intense sunlight heat. Do not place battery in fire or other excessively hot environments.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this battery. If there is any damage to the battery such as dents, punctures, tears, deformities or corrosion, due to any cause, discontinue use and contact manufacturer or dispose of in an appropriate manner.
- Do not disassemble this battery or attempt to repair or modify it in any manner.
- Do not expose this battery to moisture or submerge it in liquid. Keep battery dry at all times.
- Do not attempt to charge battery using any other method, apparatus or connection other than the device's USB connector. For questions or instructions for the various ways to charge the power pack refer to the product's user manual.
- Do not attempt to replace any part of this battery.
- If this battery is intended by purchaser to be used by a minor, purchasing adult agrees to provide detailed instructions and warnings to any minor prior to use. Failure to do so is sole responsibility of purchaser, who agrees to indemnify manufacturer for any unintended use or misuse by a minor.

- All batteries have gone through a thorough quality assurance inspection. If you find that your battery is excessively hot, is emitting odor, is deformed, abraded, cut or is experiencing or demonstrating an abnormal phenomenon, immediately stop all battery use.
- For extended storage, first charge your battery for one hour.
- Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery recycling center.

This battery is meant for use only in conjunction with the appropriate mobile entertainment device.

Manufacturer shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this battery in conjunction with any device or accessory other than the appropriate mobile entertainment device for which this battery is designed. Manufacturer will not be responsible for any damages you or any third party may suffer as a result of misuse of this battery as outlined above. If you are responsible for battery use with an unintended mobile entertainment device and damages result from such use, you agree to indemnify manufacturer for any resulting injuries to any third part(ies).